





Brass Hose Barbs

Male Hose Barb	Part No.	Hose ID x MPT
	BHBM-4A	1/4 x 1/8
	BHBM-4B	1/4 x 1/4
	BHBM-4C	1/4 x 3/8
	BHBM-4D	1/4 x 1/2
	BHBM-5A	5/16 x 1/8
	BHBM-5B	5/16 x 1/4
	BHBM-5C	5/16 x 3/8
	BHBM-6A	3/8 x 1/8
	BHBM-6B	3/8 x 1/4
	BHBM-6C	3/8 x 3/8
	BHBM-6D	3/8 x 1/2
	BHBM-6E	3/8 x 3/4
	BHBM-8B	1/2 x 1/4
	BHBM-8C	1/2 x 3/8
	BHBM-8D	1/2 x 1/2
	BHBM-8E	1/2 x 3/4
BHBM-10C	5/8 x 3/8	
BHBM-10D	5/8 x 1/2	
BHBM-10E	5/8 x 3/4	
BHBM-12D	3/4 x 1/2	
BHBM-12E	3/4 x 3/4	
BHBM-16E	1 x 3/4	

Part No.	Hose ID	Hose Barb Slicer
BHBS-3	3/16	
BHBS-4	1/4	
BHBS-5	5/16	
BHBS-6	3/8	
BHBS-8	1/2	

Part No.	Hose ID x MPT	Male Hose Barb Elbow 90°
BHB9M-4A	1/4 x 1/8	
BHB9M-4B	1/4 x 1/4	
BHB9M-6B	3/8 x 1/4	
BHB9M-6C	3/8 x 3/8	
BHB9M-8B	1/2 x 1/4	
BHB9M-8C	1/2 x 3/8	
BHB9M-10C	5/8 x 3/8	
BHB9M-10D	5/8 x 1/2	

Male Hose Barb Elbow 45°	Part No.	Hose ID x MPT
	BHB4M-6A	3/8 x 1/8
	BHB4M-6B	3/8 x 1/4
	BHB4M-6C	3/8 x 3/8

Part No.	Hose ID x FPT	Female Hose
BHBF-4A	1/4 x 1/8	
BHBF-4B	1/4 x 1/4	
BHBF-5B	5/16 x 1/4	
BHBF-6A	3/8 x 1/8	
BHBF-6B	3/8 x 1/4	
BHBF-6C	3/8 x 3/8	
BHBF-6D	3/8 x 1/2	
BHBF-8C	1/2 x 3/8	
BHBF-8D	1/2 x 1/2	

Recommended Max. Working Pressure: 150 psi

Temperature Range: -40 ° to 160 °F

Recommended Assembly:

1. Cut hose squarely to length
2. Slide hose clamp or Ferrule onto hose
3. Lubricate hose barb
4. Push hose onto barb until it bottoms onto hex or shoulder
5. Place hose approx., 1/4" back from hex and tighten or crimp ferrule